




210 ROLLING UP SCREEN

BUILD YOUR PROPERTY WISELY

Maximum size for different door opening

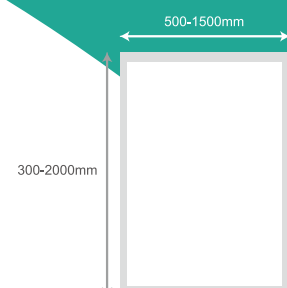

WHAT MAKE IT OUTSTANDING?

Standing out from the majority of competitors, our 210 rolling screen has simple and modern look with quite efficient construction. It is easy to size and install, which make it quite favorable to dealers who could just stock some regular sizes and do the cutting in spot, just one visit could conclude the service from measuring to installation. The spring could be adjusted as time past, when the mesh may get a little loose, to guarantee a perfect state for long term worry free use.

Features



Size adjustable freely Both width and height could be adjusted by cutting in spot, just need to stock some sizes and one visit could offer a complete service.



Heavy duty aluminum while most rolling screen are made of aluminum profile of 0.6-0.8mm, our system insist to offer 1.2mm-1.5mm for different section to make a strong body.



Spring adjustment system the spring could be adjusted any time under the instruction, to get a satisfied speed of the rolling mesh, which is well-adjusted right before leaving factory, service.



Big size available. The screen is designed to match different size of opening up to Width of 1500mm and Height of 2000mm.



Various opening direction:
 Rolling up
 Rolling left or right
 Double sashes
 Triple sashes are all available.

Stocking:



white



gray

Installation guide

Assemble

1. Make sure the projection of the screen clip runs in the center groove of the slide track.
2. Insert the joint of the housing bracket into the slide track.
3. Insert the joint of the bottom track bracket into the slide track, and frame all side.

Installation

1. Using double-side tape to install

- 1) Put the double-sided tape to the sash frame side of the assemble screen in above steps.
- 2) Put the screen to the window before installation, confirm the installing position.
- 3) Remove the backing of the double-sided tape and mount the screen on the position confirmed in step 2)
- 4) Use the silicon to fill the two slide tracks to affix firmly

2. Using screw to install

- 1) Put a short piece double-side tape to the top the bottom track to the assemble screen in above steps
- 2) Put the screen to the window before installation, confirm the installing position
- 3) Remove the backing of the double-sided tape and mount the screen on the exact position.
- 4) Screwing up the top housing and the two slide tracks